

BEFORE FIRST USE (220 V)

Insert the hoses into the detergent bottles

- Both hoses are transparent
- **Check the label on the machine** (at the bottom where the hoses come out)



Clear liquid = Rinse aid
Blue liquid = Detergent

- ➔ Put each hose **into the correct bottle**
- ➔ Push the hose all the way to the bottom of the bottle



PREPARE THE MACHINE

(Only necessary if the machine has not been used for several hours and is cold)

1 Turn the switch to the right

- Set it to the temperature symbol



2 Wait

- **Wait 20–30 minutes**
-  **When the temp. Light starts blinking**, the machine is ready 

- ✗ Do not press anything during this time
- ✗ Do not change the switch position



START THE WASH CYCLE

3 Turn the switch to the desired wash symbol

- **The wash cycle starts automatically**





IMPORTANT

- Do not add salt
- Do not change any settings
- If there is a problem - contact EVEX

END OF THE DAY (VERY IMPORTANT)

Drain the mashine

1. Remove the drain plug inside the machine
2. Turn the switch to **the left** 

 The machine drains the water automatically

3. Wait until no more water is running
4. Then turn the switch to **OFF**



IMPORTANT

! If the water is not drained, the machine will not heat up properly the next day.